
Assmbly Instruction

Lazy Susan

Code	Description	Qty.
А	Bottom Panel	1
В	Lazy Susan Hardware	1
С	Bottom Tunetable, and squre wood board	1 + 1
D	Middle Panel with Tunetalbe Attached	1
Е	Rear Side Panel (L/R)	2
F	Front Side Panel (L/R)	2
G	Front Frame Long Sticker	1
Н	Front Frame	2
	Back Panel	1
J	Toe Kick	2
К	Milldle Turntable Sticker	2
L	Front Door	2
М	Hinges Door to Door	2
N	Hinges Door to Frame	2
0	Door Magnet	2 (1set)
Р	Back Panel Support	1

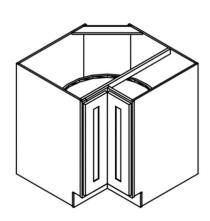



For Product lines: Ice White Shaker/Cambridge White Raised/ Ashton Gray Shaker /Driftwood Gray Raised/Antique White/Rustic Grey

Required Tools:



Step-by-Step Instruction:

Step 1	Step 2
Lay A flat, finished side facing upward, find the middle point by using pensil to draw out 2 crossing lines. Open B (as picture) and lay it on A , secure B on A with screws.	Lay C flat facing downward, attach square board on the middle of C Attach A on C, using the larger hole created from Step 1 to secure the screws on the C. Using the same method to secure 4 screws

Assmbly Instruction

Lazy Susan



Step 3		Step 4			
Slide both E from groove onto the A, secure with Nail Gun Secure with screws from the side back panels		Slide both F from groove onto the A, align to E and F panels and secure with Nail Gun (or secure with Metal Clips, total 6pcs, each side 3pcs)			
Step 5		Step 6			
Attach I on to E and secure with Nail Gun Attach J onto F secure with Nail Gun Secure with screws from the bottom of back panel		Attach two K onto both middle of F, make sure it is even and balanced, secrue with screws Lay D onto K and secure with Nail Gun	F C F		
Step 7		Step 8			
Attach both H onto F, secure with Metal Clips onto F *One front frame (H) has door hinges gap, it can be installed on left or right, it depends on the door openning direction*		Attach G on the H and secure with nail gun, also screw G between E and F	E B B H H F F		

Assmbly Instruction



Lazy Susan

