


Assmby Instruction

Base Blind Corner

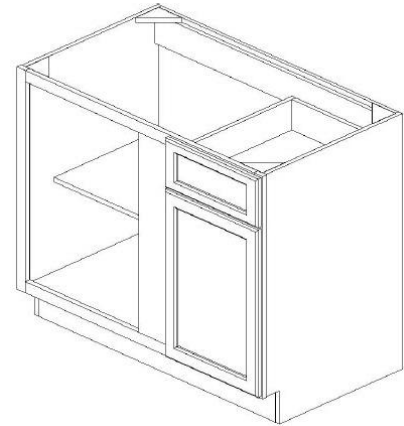

Code	Description	Qty.
A	Side Panel (L/R)	2
B	Face Frame	1
C	Back Panel	1
D	Bottom Panel	1
E	Shelf	1
F	Toe Kick	1
G	Drawer Box (Side/bottom panels)	5 (1set)
H	Drawer Face	1
I	Door	1
J	Plastic Shelf Clips	4
K	Sliders & Adapter	2 pairs
L	Plastic Slider holder	2
M	Hinges	2
N	Support Bracket (wooden)	4



For Product lines:
Ice White Shaker/Cambridge White Raised/ Ashton
Gray Shaker /Driftwood Gray Raised/Antique White

Required Tools:

Nail Gun



Rubber Hammer



Power Drill



Step-by-Step Instruction:

Step 1		Step 2	
<p>Lay front frame (B) flat, grooves facing upward (on a soft flat working surface to avoid scratching the face)</p> <p>Slide side panel (A) to the grooves</p>		<p>Slide bottom panel (D) into rooves of A and B</p>	

Assmby Instruction

Base Blind Corner







<p>Step 3</p> <p>Slide back panel (C) into grooves of A and D and secure with Nail Gun (use metal clip if no nail gun)</p> <p>Secure with screws from the bottom of back panel (C)</p>		<p>Step 4</p> <p>Attach F onto A and secure with Nail Gun</p>	
<p>Step 5</p> <p>Insert Plastic shelf clips (J) onto pre-drilled holds on A</p>		<p>Step 6</p> <p>Slide in shelf (E) and make sure the finished front edge facing out</p>	
<p>Step 7</p> <p>Screw both rear slider holder brackets (L) into pre-drill holes in C, angle facing upward</p> <p>Install sliders (K) into L and screw into the side of B</p> <p><i>*Slider Holder (L) can be installed on the left or right, depends on the blind side, install accordingly*</i></p>		<p>Step 8</p> <p>Assemble the drawer box by using Rubber Hammer</p> <p><i>*Use wood glue for a permanent bond*</i></p>	

Assmly Instruction

Base Blind Corner

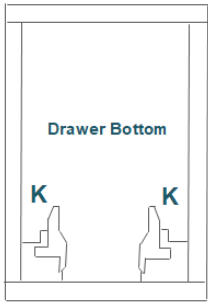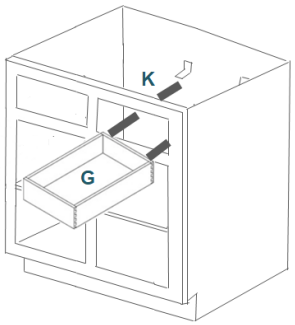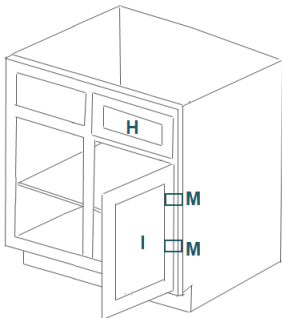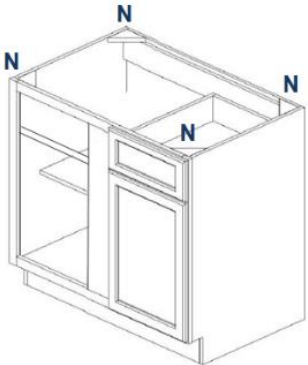

Step 9		Step 10	
<p>Attach plastic adapter underneath the drawer</p> <p>There will be a letter indicating L or R side</p>	 <p>Drawer Bottom</p> <p>K K</p>	<p>Position Drawer box G over drawer sliders K</p>	
Step 11		Step 12	
<p>Attach Drawer face (H) onto drawer front</p> <p>Attach Hinge (M) on the face frame, and then install door (I) onto hinge</p>	 <p>H</p> <p>M</p> <p>I</p> <p>M</p>	<p>Place Wooden support brackets (N) into corners of A, B, C</p>	 <p>N</p> <p>N</p> <p>N</p> <p>N</p>