


Assmby Instruction

Wall Diagonal Corner

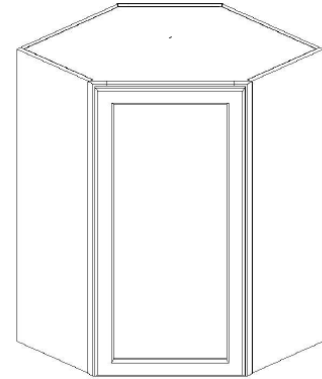

Code	Description	Qty.
A	Front Side Panel (L/R)	2
B	Rear Side Panel (L/R)	2
C	Front Frame	1
D	Back Panel	1
E	Bottom/Top Panel	2
F	Door	1
G	Shelf (Qty. depends on Cabinet height)	2 or 3
H	Plastic Shelf Clips (Qty. depends on Shelf quantity)	8 or 12
I	Hinges (Qty. depends on Cabinet height)	2 or 3



For Product lines:
 Modern Gray/Frenso Gray Shaker/Anaheim Gray/Beech Espresso/Cinnamon Shaker

Required Tools:

Power Drill



EASY ASSEMBLY METAL CLIP SYSTEM

- Align Clips ① and ②
- Slide ① into ②
- Insert locking screw into clip pair
- Tighten all screws

Step-by-Step Instruction:

Step 1		Step 2	
<p>Lay front frame (C) flat, grooves facing upward (on a soft flat working surface to avoid scratching the face)</p> <p>Slide both front side panels (A) to the grooves and secure with metal clips (Refer to metal clip system above)</p>		<p>Slide bottom/Top panels (E) into grooves of A and C, secure with Metal Clips</p>	

Assmly Instruction

Wall Diagonal Corner



<p>Step 3</p> <p>Install rear side panels (B), connectors align to the top panel and bottom panel (E), and front side panels (A)</p> <p>Secure with Metal Clips connect font panels (A) and real panels (B)</p>		<p>Step 4</p> <p>Install back panels (D), connectors align to the top panel and bottom panel (E), and back side panels (B)</p> <p>Secure with Metal Clips and secure with screws at the upper and botom back panel</p>	
<p>Step 5</p> <p>Insert plastic shelf clips (H) onto pre-drilled holes on side panels (A) and (B)</p>		<p>Step 6</p> <p>Side in three shelves (G) one by one and make sure the finished front edge facing out</p> <p>Tips: 2 or 3 shelf board input in the cabinet, then one by one to clip on shelf holders</p>	
<p>Step 7</p> <p>Attache Hinges (I) on the face frame (C), install door (F) onto hinges</p>			